




TELESCOPING FLAGPOLE USAGE INSTRUCTIONS

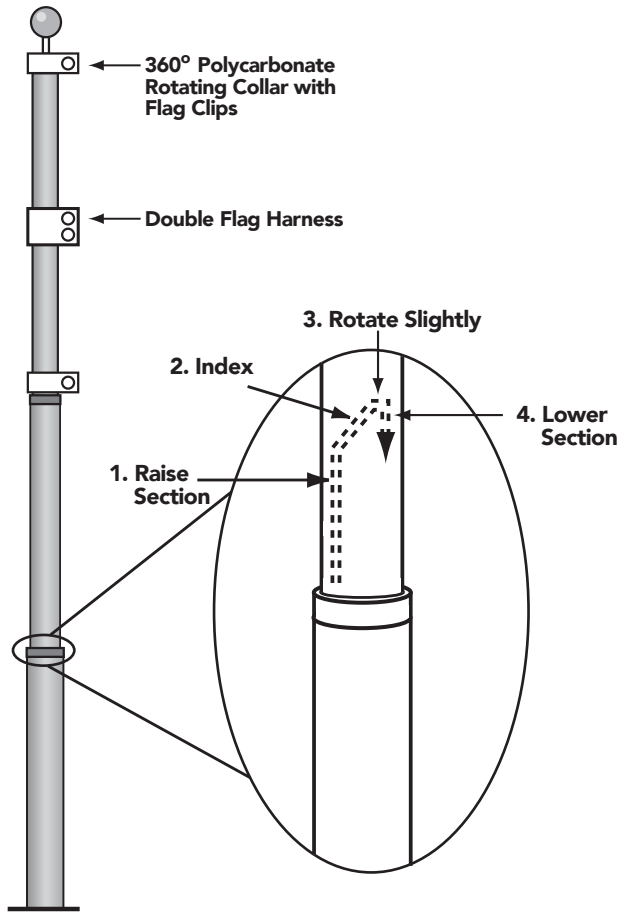

INSTALLATION INSTRUCTIONS

STEP 1: Slide the flagpole into the ground sleeve, making sure that no dirt enters the ground sleeve.

STEP 2: Attach the flag to the rotating collars and raise the pole section.

REMEMBER: Your AEP telescoping flagpole can be removed when severe weather is pending.

OPERATING INSTRUCTIONS

STEP 1: To raise the flagpole; first raise the smallest section to its full extent allowing it to self index; slightly rotate counter clockwise; then lower to engage locking tabs. It is not necessary to exert force to lock each section in place. Repeat with remaining sections.


STEP 2: To lower the pole; reverse the procedure in Step 1. Each section of the pole should be lowered slowly, not allowing sections to drop freely.

NOTE: Your AEP flagpole can be lowered or removed for storage in the event of extreme weather conditions, i.e. before a tornado or hurricane.


MAINTENANCE INSTRUCTIONS

STEP 1: The AEP series of flagpoles is virtually maintenance free. In order to clean the pole simply wipe the pole down with soap and water and then rinse clean.

ONE FLAG

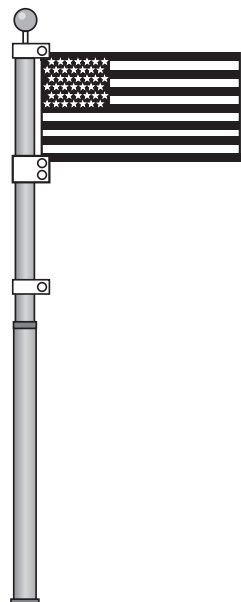

**ONE FLAG
HALF MAST**

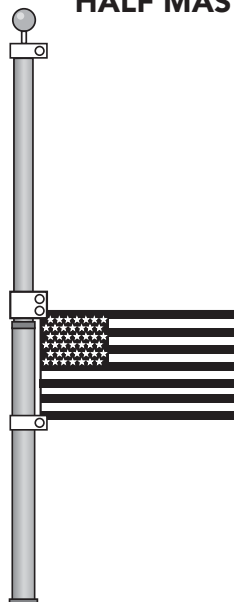

TWO FLAGS

